AUDI_V01.10 Daig Function List (Note:For reference only) NOTES: This function is supported. * This function may be supported, which depends on the actual condition of the vehicle. O This function is not supported. ▲ This function is the new feature in this version. Vehicle Model Year 2011 - 2017 2001 - 2006 1997 - 2017 А3 A4 1998 - 2017 А5 2008 - 2017 A6 1998 - 2017 2011 - 2017 A7 1999 - 2017 A8 2003 -2009 Cabriolet 2012 -2017 Q3 2009 - 2017 Q5 Q7 2007 - 2017 2007 -2017 R8 1999 - 2006 TT Systemlist EcuInfo. ReadCodes EraseCode LiveData 01 Engine Control Module 1 02 Transmission Control Module • 03 Brake Control Module • • 04 Steering Angle Sender • 05 Kessy 06 Seat Adjustment Passenger Side 07 Display Control Unit 08 Air Conditioning • • • • 09 Central Electrics • • • OB Auxiliary Air Heater • • OC Rear Axle Steering 2 OD Sliding Door Left • OE Media Player Position 1 • • • • OF Radio Tuner - Digital 10 Parking Assistance 2 • • • • 11 Engine Control Module 2 12 Clutch Control Unit lacktrianglelacktrianglelacktriangle13 Adaptive Cruise Control 14 Wheel Dampening Electronics 15 Airbag 16 Steering Column Electronics • • 17 Dash Board • 18 Auxiliary Parking Heating 19 Gateway 1B Power-Assisted Steering • • • 1C Vehicle Position Detection 1D Driver Identification • •

lacktriangle

lacktriangle

1E Media Player Position 2

1F Radio Satellite

| 20 High Beam Assistance | | | | • |
|-------------------------------------|---|---|---|---|
| 21 Battery Energy Control Module 2 | | • | • | • |
| 22 4WD Electronics | | • | | |
| 23 Brake Boost | | • | | |
| 24 Drive Slip Control | • | • | | |
| 25 Immobilizer | • | • | | |
| 26 Electric Roof Control | • | • | | • |
| 27 Display Control Unit Rear | | • | | |
| | | • | | |
| 28 Climate Control Unit Rear | • | • | • | • |
| 29 Light Control Left | • | • | • | • |
| 2B Steer Column Locking | | • | | • |
| 2D Voice Amplifier | • | • | • | • |
| 2E Media Player Position 3 | • | • | • | • |
| 2F TV Tuner - Digital | • | • | • | • |
| 30 Special Function 2 | • | • | • | • |
| 31 Engine Electronics Conjunction | • | • | • | • |
| 32 Locking Electroniscs | • | • | • | • |
| 34 Self Adjustment Suspension | • | • | • | • |
| 35 Central Locking Control Module | • | • | • | • |
| 36 Seat Adjustment Driver Side | • | • | • | • |
| 37 Navigation | • | • | • | • |
| 38 Roof Electronics | • | • | • | • |
| 39 Light Control Right | • | • | • | • |
| 3A Special Vehicle Assistant | • | • | • | • |
| 3B Sensor Electronics | • | • | • | • |
| 3C Lane Change Assistance System | • | • | • | • |
| 3D Special Function | • | • | • | • |
| 3E Media Player Position 4 | • | • | • | • |
| 40 Air Conditioning Compressor | • | • | • | • |
| 41 Diesel Pump Electronics | • | • | • | • |
| 42 Driver-Door Electronics | • | • | • | • |
| 43 Braker Boost Assistance | • | • | • | • |
| 44 Steering Assistance | • | • | • | • |
| 45 Interior Monitoring | • | • | • | • |
| 46 Central Control Module | • | • | • | • |
| 47 Sound System | • | • | • | • |
| 48 Seat Adjustment Rear Driver Side | • | • | • | • |
| 49 Automatic Lighting Switch | • | • | • | • |
| 4B Multifunction Module | • | • | • | • |
| 4C Tyre Pressure Monitor II | • | • | • | • |
| 4E Control Head Rear Right | • | • | • | • |
| 4F Central Electronics II | • | • | • | • |
| 51 Drive Motor Control Module | • | • | • | • |
| 52 Passenger-Door Electronics | • | • | • | • |
| 53 Parking Brake | • | • | • | • |
| 54 Rear Spoiler | • | • | • | • |
| 55 Headlight Range Control | • | • | • | • |
| 56 Radio | • | • | • | • |
| 57 TV-Tuner | • | • | • | • |
| 58 Auxiliary Fuel Tank | • | • | • | • |
| 59 Towing Protection | • | • | • | • |

| 5B Seat Adjustment Rear Passenger Side | • | • | • | • |
|---|---|---|---|---|
| 5C Lane Keeping Assistance System | • | • | • | • |
| 5D Operation | • | • | • | • |
| 5E Control Head Left Rear | • | • | • | • |
| 5F Information Control Unit 1 | • | • | • | • |
| 61 Battery Regulation | • | • | • | • |
| 62 Door Electronics Left Rear | • | • | • | • |
| 63 Entry Assistance Driver Side | • | • | • | • |
| 64 Stabilizers | • | • | • | • |
| 65 Tyre Pressure Monitoring I | • | • | • | • |
| 66 Seat/Mirror Adjustment | • | • | • | • |
| 67 Voice Control | • | • | • | • |
| 68 Wiper Control Unit | • | • | • | • |
| 69 Trailer Function | • | • | • | • |
| 6B Aerodynamics Control Module | • | • | • | • |
| 6C Camera System Rear View | • | • | • | • |
| 6D Electronic Equipment of Trunk Lid | • | • | • | • |
| 6E Display Control Roof | • | • | • | • |
| 6F Central Control Module II | • | • | • | • |
| 71 Battery Charger | • | • | • | • |
| 72 Door Electronics Right Rear | • | • | • | • |
| 73 Entry Assistance Passenger Side | • | • | • | • |
| 74 Vehicle Control System | • | • | • | • |
| 75 Telematics Communication Unit | • | • | • | • |
| 76 Parking Assistance | • | • | • | • |
| 77 Telephone | • | • | • | • |
| 78 Sliding Door | • | • | • | • |
| 7D Auxiliary Heater | • | • | • | • |
| 7E Dash Board Display Unit | • | • | • | • |
| 7F Information Control Unit 2 | • | • | • | • |
| 81 Gear Shift Control Module | • | • | • | • |
| 82 Head Up Display | • | • | • | • |
| 84 Night Vision | • | • | • | • |
| 85 On Board-Cammera | | • | • | |
| 88 Muiti Contour Seat Driver Side | • | • | • | • |
| 89 Multi Contour Seat Passenger Side | • | • | • | |
| 8A Muiti Contour Seat Rear Driver Side | • | _ | • | |
| 8B Adaptive Cruise Control 2 | | • | | |
| 8C Battery Energy Control Module | | • | • | |
| | | • | • | |
| 8D Muiti Contour Seat Rear Passenger Side | • | • | • | • |
| 8E Image Processing Electronics | • | • | • | • |
| 8F Pretensioner Front Left | • | • | • | • |
| 90 Pretensioner Front Right | • | • | • | • |
| 91 Engine Control Moudle LT3 | | • | • | |
| 92 Transmission Electronics LT3 | • | • | • | |
| 93 Immobilizer LT3 | • | • | • | • |
| 94 Airbag LT3 | • | • | • | • |
| 95 Electronic Stability Program LT3 | • | • | • | • |
| 96 Instruments Cluster LT3 | • | • | • | • |
| 97 Tachograph LT3 | • | • | • | • |
| 98 Tire Pressure Monitoring LT3 | • | • | • | • |

| 99 Electrical Ignition/Starter Switch LT3 | • | • | • | • |
|--|--------------|-------------|--------|-----|
| 9A Remote Control LT3 | • | • | • | • |
| 9B Driver's Door Electronics LT3 | • | • | • | • |
| 9C A/C Electronics LT3 | • | • | • | • |
| 9D Auxiliary Heater(Fuel)LT3 | • | • | • | • |
| 9E Auxiliary Heater(Electric)LT3 | • | • | • | • |
| 9F Additional Heater, Water LT3 | • | • | • | • |
| AO Radio 'Audio 5' LT3 | • | • | • | • |
| Al Navigation LT3 | • | • | • | • |
| A2 CD Changer LT3 | • | • | • | • |
| A3 Telephone LT3 | • | • | • | • |
| A5 Front Sensors Driver Assistance System | • | • | • | • |
| A6 Microphone Control Unit | • | • | • | • |
| A7 Infotainment Interface | • | • | • | • |
| A9 Actuator for Structure-Borne Sound | • | • | • | • |
| AC Reductant Control Module | • | • | • | • |
| AD Sensors Brake Systems | • | • | • | • |
| BO Roof Display/Control Head (Roof Control Head) LT3 | • | • | • | • |
| B1 Upper Operating Field LT3 | • | • | • | • |
| B2 Parking Aid LT3 | • | • | • | • |
| B3 Trailer Function LT3 | • | • | • | • |
| B4 Vehicle Electrical System Control Module LT3 | • | • | • | • |
| B5 Programmable Special Module LT3 | • | • | • | • |
| B6 Steering Column Jacket Switch Module LT3 | • | • | • | • |
| B7 Access Startsystem Interface | • | • | • | • |
| B8 Electronic Roof Control 2 | • | • | • | • |
| B9 Auxiliary Display Conrol Unit | • | • | • | • |
| BA Assembly Mounting | • | • | • | • |
| BB Door Electronics Rear Driver Side | • | • | • | • |
| BC Door Electronics Rear Passenger Side | • | • | • | • |
| BD High Voltage Battery Charge Management | • | • | • | • |
| BE Sliding Door Rear Left | • | • | • | • |
| BF Sliding Door Right | • | • | • | • |
| CO Actuator For Exterior Noise | • | • | • | • |
| C1 Battery regulation LT3 | • | • | • | • |
| C2 Transmission Control Module 2 | • | • | • | • |
| C4 DC/DC Converter Control Module | • | • | • | • |
| C5 Thermal Management | • | • | • | • |
| C6 Battery Charger Control Module | • | • | • | • |
| C7 Pedestrian Protection | • | • | • | • |
| CB Rear Axle Steering | • | • | • | • |
| DO Front Axle Lift System | • | • | • | • |
| AUDI_V01.10 Reset Function List (| Note: For n | afaranco or | | |
| NODI_vol. 10 Neset Punction List () | HOLE. POI 10 | ererence on | 11 y / | |
| Vehicle OIL EPB | ETC | BMS | SAS | DPF |

*

*

*

*

*

*

AUDI