VW V01.101	Daig Function List (Note:For reference only)
NOTES:	
• This function is supported.	
	ed, which depends on the actual condition of the vehicle.
O This function is not support	
▲ This function is the new fea	
Vehicle	Model Year
Amarok	2010 - 2015
Beetle	2012 - 2015
Beetle Cab	2013 -
Beetle Cab(NAR)	2012 -
New Beetle	1998 - 2011
New Beetle	1998 - 2011
New Beetle Cab	2003 - 2011
New Beetle Cab(NAR)	2010
New Beetle(NAR)	2010
Bora	1995 - 2005
Bora(CHN)	2013 -
CaddY	2011 - 2015
CaddY	2004 - 2010
CaddY	1996 - 2003
Corrado	1995
Crafter LT3	2006 - 2015
Eos	2006 - 2007
Eos(NAR)	2010 -
Fox/CrossFox/Lupo	2004 - 2017
Gol Par Sav Poi	2006 - 2015
Gol Par Sav Poi	1999 - 2006
Gol Special	1999 - 2005
Gol/VoYage/Saveiro	2009 - 2013
Golf	1998 - 2017
Golf Cabrio	1995 - 2002
Golf Cabrio	1997 - 2002
Golf Cabriolet	2012 - 2017
Golf Jetta II	1995 - 2010
Golf Jetta VI	2009 - 2014
Golf Jetta VI(NAR)	2010 - 2014
Golf Plus	2009 - 2014
Golf Plus	2005 - 2009
Golf Variant VII	2014 -
Golf Vento II	1995 - 1999
Golf/Jetta VII	2013 - 2017
Jetta	2005 - 2010
Jetta IV	1999 - 2015
Jetta(CHN)	2013 -
Kombi	2006 - 2015
LT2	1996 - 2006
Lupo	1999 - 2006
Novo Gol/VoYage/Saveiro	2013 - 2017
Passat	2015 - 2017
Passat	2011 - 2017
i assat	2011 2011

Passat	2010 -					
Passat B4	1995 -					
Passat B5	1997 -	2005				
Passat B6	2005 -					
Passat B7	2011 -					
Passat CC	2009 -	2017				
Phaeton D1	2003 -					
Polo	1995 -					
Polo Classic	1996 -					
Polo Vivo	2010 -					
Rabbit	2006 -					
Sagitar	2006 -					
Santana	2001 -					
Sharan I	2001 -					
Sharan II	2011 -					
SpaceFox/SpaceCross/Suran/Sportva	2006 -					
T4 Caravelle	2001 -					
Tiguan	2008 -					
Tiguan (NAR)	2010 -					
Touareg	2003 -					
Touareg	2010 -					
Touareg (NAR)	2010 -					
Touareg (NAR)	2011 -					
Touran	2003 -					
Transporter	1995 -					
Transporter	1996 -					
Transporter	2010 -					
Transporter	2004 -					
Transporter/Multivan	2010 -					
Transporter/Multivan	2004 -					
Up	2012 -					
Up	2012 -					
XL1	2013 -					
Tiguan (NAR)	2010 -					
Golf Variant VII	2014 -					
Golf	2013 -					
Sagitar	2006 -					
Up	2012 -					
Touareg(NAR)	2011 -					
Jetta(CHN)	2013 -					
Bora (CHN)	2013 -					
Systemlist			EcuInfo.	ReadCodes	EraseCode	LiveData
01 Engine Control Module 1			•	•	•	•
02 Transmission Control Module			•	•	•	•
03 Brake Control Module		•	•	•	•	
04 Steering Angle Sender			•	•	•	•
05 Kessy			•	•	•	•
06 Seat Adjustment Passenger Side			•	•	•	•
07 Display Control Unit		•	•	•	•	
08 Air Conditioning			•	•	•	•
09 Central Electrics				•	•	•
vo contrar Dicettico				-	-	-

OB Auxiliary Air Heater		•	•	•
OC Rear Axle Steering 2	•			
OD Sliding Door Left	•	•		
OE Media Player Position 1	•			
OF Radio Tuner - Digital	•	•	•	•
10 Parking Assistance 2	•	•		
11 Engine Control Module 2		•	•	
12 Clutch Control Unit	•			
13 Adaptive Cruise Control	•	•		•
14 Wheel Dampening Electronics	•			
15 Airbag	•			•
16 Steering Column Electronics	•			
17 Dash Board	•	•		
18 Auxiliary Parking Heating				
19 Gateway		•	•	
1B Power-Assisted Steering				
1C Vehicle Position Detection	•	•	•	•
1D Driver Identification		-		
1E Media Player Position 2		•		
1F Radio Satellite		•		•
20 High Beam Assistance		•		
				•
21 Battery Energy Control Module 2 22 4WD Electronics		•		•
23 Brake Boost				•
24 Drive Slip Control	•	•		•
25 Immobilizer	•			•
26 Electric Roof Control				
27 Display Control Unit Rear				
28 Climate Control Unit Rear		•	•	•
29 Light Control Left		•		
28 Steer Column Locking				•
				•
2D Voice Amplifier 2E Media Player Position 3		•		•
				•
2F TV Tuner - Digital 30 Special Function 2				•
-	•			•
<ul><li>31 Engine Electronics Conjunction</li><li>32 Locking Electroniscs</li></ul>	•	•	•	•
				•
34 Self Adjustment Suspension	•	•		
35 Central Locking Control Module 36 Seat Adjustment Driver Side		•		
	•	•		-
37 Navigation	•	•		•
38 Roof Electronics	•			•
39 Light Control Right	•	•		•
3A Special Vehicle Assistant	•			
3B Sensor Electronics				
3C Lane Change Assistance System	•			
3D Special Function	•			
3E Media Player Position 4	•			
40 Air Conditioning Compressor	•			•
41 Diesel Pump Electronics	•			•
42 Driver-Door Electronics		•	•	

43 Braker Boost Assistance			•	•
44 Steering Assistance		•	•	
45 Interior Monitoring		•	•	
46 Central Control Module		•	•	
47 Sound System	•	•	•	
48 Seat Adjustment Rear Driver Side	•	•	•	
49 Automatic Lighting Switch				
4B Multifunction Module	•	•	•	•
4C Tyre Pressure Monitor II	•	•	•	•
4E Control Head Rear Right	•	•	•	
4F Central Electronics II	•	•	•	•
51 Drive Motor Control Module	•	•	•	•
52 Passenger-Door Electronics				
53 Parking Brake		•	•	
54 Rear Spoiler		•	•	
55 Headlight Range Control				
56 Radio	•	•	•	•
57 TV-Tuner		•	•	
58 Auxiliary Fuel Tank				
59 Towing Protection				
5B Seat Adjustment Rear Passenger Side				
5C Lane Keeping Assistance System	•	•	•	
5D Operation				
5E Control Head Left Rear	•	•	•	
5F Information Control Unit 1				
61 Battery Regulation				
62 Door Electronics Left Rear				
63 Entry Assistance Driver Side	•	•	•	•
64 Stabilizers	•	•	•	•
65 Tyre Pressure Monitoring I	•	•	•	•
66 Seat/Mirror Adjustment		•	•	
67 Voice Control		•	•	•
68 Wiper Control Unit	•	•	•	
69 Trailer Function	•	•	•	•
6B Aerodynamics Control Module				
6C Camera System Rear View	•	•	•	•
6D Electronic Equipment of Trunk Lid	•	•	•	•
6E Display Control Roof	•	•	•	•
6F Central Control Module II	•	•	•	•
71 Battery Charger	•	•	•	•
72 Door Electronics Right Rear	•	•	•	•
73 Entry Assistance Passenger Side	•	•	•	•
74 Vehicle Control System	•	•	•	•
75 Telematics Communication Unit	•	•	•	•
76 Parking Assistance	•	•	•	•
77 Telephone	•	•	•	•
78 Sliding Door	•	•	•	•
7D Auxiliary Heater	•	•	•	•
7E Dash Board Display Unit	•	•	•	•
7F Information Control Unit 2	•	•	•	•
81 Gear Shift Control Module	•	•	•	•
or sour onite convict module	-	-	-	-

84 Night Vision       •       •       •         85 On Doard-Cammera       •       •       •         88 Muit Contour Seat Driver Side       •       •       •         88 Muiti Contour Seat Rear Driver Side       •       •       •         88 Matti Contour Seat Rear Driver Side       •       •       •         88 Adaptive Cruise Control 2       •       •       •         80 Matti Contour Seat Rear Passenger Side       •       •       •         80 Inti Contour Seat Rear Passenger Side       •       •       •         80 Muiti Contour Seat Rear Passenger Side       •       •       •         90 Pretensioner Front Left       •       •       •       •         91 Engin Control Moule LT3       •       •       •       •         92 Transmission Electronics LT3       •       •       •       •         93 Tamobilizer LT3       •       •       •       •       •         94 Airbag LT3       • <td< th=""><th>82 Head Up Display</th><th></th><th>•</th><th>•</th><th>•</th></td<>	82 Head Up Display		•	•	•
85 On Board-Cammera       •       •         88 Muiti Contour Seat Driver Side       •       •         88 Muiti Contour Seat Rear Driver Side       •       •         88 Matti Contour Seat Rear Driver Side       •       •         80 Rattery Energy Control 2       •       •         80 Rattery Energy Control Module       •       •         80 Rattery Energy Control Module       •       •         80 Pretensioner Front Right       •       •         91 Engin Control Module LT3       •       •         92 Transmission Electronics LT3       •       •         93 Immobilizer LT3       •       •       •         94 Airbag LT3       •       •       •         95 Electronic Stability Program LT3       •       •       •         96 Instruments Cluster LT3       •       •       •         98 Tire Pressure Monitoring LT3       •       •       •         99 Electrical Ignition/Starter Switch LT3       •       •       •         90 Bactrical Ignition/Starter Switch LT3       •       •       •         90 Auxiliary Heater(Electric)LT3       •       •       •         91 Auxiliary Heater Cluctric)LT3       •       •       • <td></td> <td></td> <td></td> <td></td> <td></td>					
88 Muiti Contour Seat Priver Side       •       •         89 Muiti Contour Seat Passenger Side       •       •         80 Muiti Contour Seat Ray Priver Side       •       •         80 Maiti Contor Seat Ray Passenger Side       •       •         80 Muiti Contor Seat Ray Passenger Side       •       •         80 Muiti Contor Seat Ray Passenger Side       •       •         81 Maiti Contor Seat Ray Passenger Side       •       •         82 Transmission Flecttronics       •       •       •         90 Pretensioner Front Left       •       •       •         91 Engine Control Moudle LT3       •       •       •         92 Transmission Electronics LT3       •       •       •         91 Imobilizer LT3       •       •       •       •         92 Instruments Cluster L13       •       •       •       •       •         94 Airing 173       •					
89 Multi Contour Seat Rar Driver Side       •         80 Multi Contour Seat Rar Driver Side       •         80 Maptive Cruise Control 2       •         80 Battery Energy Control Module       •         80 Miti Contour Seat Rear Passenger Side       •         81 Image Processing Electronics       •         92 Pretensioner Front Left       •         90 Pretensioner Front Right       •         91 Engine Control Module LT3       •         92 Transmission Electronics LI3       •         93 Impobilizer LT3       •         94 Airbag LT3       •         95 Electronic Stability Program LT3       •         96 Instruments Cluster LT3       •         97 Tachograph LT3       •         98 Tire Pressure Monitoring LT3       •         99 Electrical Ignition/Starter Switch LT3       •         99 Electronics LT3       •         90 Electronics LT3       •         90 Auxiliary Meatre (Hertic)LT3       •         91 May Electronics LT3       •         92 Auxiliary Meatre (Hertic)LT3       •         93 Auxiliary Meatre (Hertic)LT3       •         94 Auxiliary Meatre (Hertic)LT3       •         95 Additional Heater, Water LT3       •         96 Au		•	•	•	•
8A Muiti Contour Seat Rear Driver Side       •       •         8B Adaptive Cruise Control Module       •       •         8B Maptive Cruise Control Module       •       •         8D Muiti Contour Seat Rear Passenger Side       •       •         8D Muiti Contour Seat Rear Passenger Side       •       •         8P retensioner Pront Left       •       •         90 Pretensioner Front Right       •       •         91 Engine Control Module LT3       •       •         92 Transmission Electronics LT3       •       •         91 Imobilizor LT3       •       •       •         92 Imobilizor LT3       •       •       •         94 Airbag LT3       •       •       •       •         95 Electronic Stability Program LT3       •       •       •       •         96 Instruments Cluster LT3       •       •       •       •       •         97 Tachograph LT3       •		•	•	•	•
88 Adaptive Cruise Control 2       •       •         80 Battery Energy Control Module       •       •         80 Maiti Contour Sent Rear Passenger Side       •       •         88 Image Processing Electronics       •       •         90 Pretensioner Front Left       •       •         90 Pretensioner Front Right       •       •         91 Engine Control Module LT3       •       •         92 Transmission Flectronics LT3       •       •         93 Immobilizer LT3       •       •       •         94 Airbag LT3       •       •       •         95 Electronic Stability Program LT3       •       •       •         96 Instruments Cluster LT3       •       •       •       •         97 Tachograph LT3       •       •       •       •       •         98 Electronic Stability Program LT3       •		•	•	•	•
8C Battery Energy Control Module       •       •         8D Muiti Contour Seat Rear Passenger Side       •       •         8E Image Processing Electronics       •       •         9P Pretensioner Front Left       •       •         90 Pretensioner Front Right       •       •         91 Engine Control Moulle LT3       •       •         92 Transmission Electronics LT3       •       •         93 Immobilizer LT3       •       •       •         94 Airbag LT3       •       •       •         95 Electronic Stability Program LT3       •       •       •         96 Instruments Cluster LT3       •       •       •       •         97 Tachograph LT3       •       •       •       •       •         98 Tire Pressure Monitoring LT3       • <td< td=""><td></td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		•	•	•	•
80 Muiti Contour Seat Rear Passenger Side       •       •         8E Image Processing Electronics       •       •         8F Pretensioner Front Left       •       •         90 Pretensioner Front Night       •       •         91 Engine Control Moudle LT3       •       •         92 Transmission Electronics LT3       •       •         91 Amobilizer LT3       •       •         92 Tashargangh LT3       •       •         95 Electronic Stability Program LT3       •       •         96 Tinstruments Cluster LT3       •       •         97 Tachograph LT3       •       •       •         98 Tire Pressure Monitoring LT3       •       •       •         99 Electronics Stability Program LT3       •       •       •         98 Remote Control LT3       •       •       •       •         99 Active Provesure Monitoring LT3       •       •       •       •       •         99 Areletrice Instat       •       <		•	•	•	•
8E Image Processing Electronics       •       •         8P Pretensioner Front Left       •       •         90 Pretensioner Front Right       •       •         91 Engine Control Modile LT3       •       •         92 Transmission Electronics LT3       •       •         93 Immobilizer LT3       •       •       •         94 Airbag LT3       •       •       •         95 Electronic Stability Program LT3       •       •       •         96 Instruments Cluster LT3       •       •       •       •         97 Tachograph LT3       •       •       •       •       •         98 Tire Pressure Monitoring LT3       •		•	•	•	•
8F Pretensioner Front Right •   90 Pretensioner Front Right •   91 Engine Control Moudle LT3 •   92 Transmission Electronics LT3 •   93 Inmobilizer LT3 •   94 Airbag LT3 •   95 Electronic Stability Program LT3 •   96 Instruments Cluster LT3 •   97 Tachograph LT3 •   98 Tire Pressure Monitoring LT3 •   99 Remote Control LT3 •   99 Refect Control LT3 •   90 Axiliary Heater (Fuel)LT3 •   91 Auxiliary Heater (Electric)LT3 •   92 Auxiliary Heater (Electric)LT3 •   94 Airbonal Heater, water LT3 •   95 Availary Heater (Electric)LT3 •   97 Additional Heater, water LT3 •   98 Tire Tressure Monitoring LT3 •   99 Auxiliary Heater (Electric)LT3 •   91 Auxiliary Heater (Electric)LT3 •   92 Auxiliary Heater (Electric)LT3 •   94 Airbonal Heater, Saistance System •   45 Front Sensors Driver Assistance System •   46 Microphone Control Unit •   47 Infotainment Interface •   49 Actuator for Structure-Borne Sound •   40 Radic Audio Field LT3 •   91 Electronic Rear Systems •   81 Upper Operating Field LT3 •   82 Parking Aid LT3 •   83 Trailer Function LT3 •   84 Starting Aid LT3 •   85 Prongrammable Special Module LT3 • <t< td=""><td></td><td>•</td><td>•</td><td>•</td><td>•</td></t<>		•	•	•	•
90 Pretensioner Front Right       •       •         91 Engine Control Moudle LT3       •       •         92 Transinssion Electronics LT3       •       •         92 Immobilizer LT3       •       •         94 Airbag LT3       •       •         95 Electronic Stability Program LT3       •       •         96 Instruments Cluster LT3       •       •         97 Tachograph LT3       •       •         98 Priver's Nonitoring LT3       •       •         99 Electrical Ignition/Starter Switch LT3       •       •         90 Driver's Door Electronics LT3       •       •         90 Auxiliary Heater(Fuel)LT3       •       •       •         90 Auxiliary Heater(Electric)LT3       •       •       •         91 Analytian Heater, Water LT3       •       •       •         92 Additional Heater, Water LT3       •       •       •         92 Addition LT3       •       •       •       •         93 Telephone LT3       •       •       •       •         94 Additional Heater, Water LT3       •       •       •       •         95 Addition LT3       •       •       •       •       •       •		•	•	•	•
91 Engine Control Moudle LT3   92 Transmission Electronics LT3   93 Immobilizer LT3   94 Airbag LT3   95 Electronic Stability Program LT3   96 Instruments Cluster LT3   97 Tachograph LT3   98 Tire Pressure Monitoring LT3   99 Electrical Ignition/Starter Switch LT3   99 Electronics LT3   90 Boriver's Door Electronics LT3   91 Driver's Door Electronics LT3   92 Auxiliary Heater (Fuel)LT3   94 Auxiliary Heater (Fuel)LT3   95 Auxiliary Heater (Electric)LT3   96 Auxiliary Heater (Electric)LT3   97 Addio 5' LT3   97 Addio 5' LT3   97 Addio 5' LT3   98 Arelephone LT3   99 Electronics LT3   90 Auxiliary Heater (Electric)LT3   91 Auxiliary Heater (Electric)LT3   92 Changer LT3   93 Telephone LT3   94 Celectronics LT3   95 Ford Sensors Driver Assistance System   96 Ford Sensors Driver Assistance System   96 Acitator for Structure-Borne Sound   97 Actuator for Structure-Borne Sound   98 Celectronic LT3   99 Electronic Structure-Borne Sound   90 Acklator for Structure-Borne Sound   91 Electronic Sensors Brake Systems   92 Foror Sensors Brake Systems   93 Electronic Structure-Borne Sound   94 Parking Aid LT3   95 Foror Sensors Brake System Control Module LT3   96 Availiary Heater Sensor Driver Assistance Sensore   97 Access Startsystem Interface   98 Parking Aid LT3   99 Availiary Heater S		•	•	•	•
92 Transmission Electronics LT3       •       •         93 Immobilizer LT3       •       •         94 Airbag LT3       •       •         95 Electronic Stability Program LT3       •       •         96 Instruments Cluster LT3       •       •         97 Tachograph LT3       •       •         98 Time Pressure Monitoring LT3       •       •         99 Electrical Ignition/Starter Switch LT3       •       •         99 Remote Control LT3       •       •       •         90 Akrilary Heater (Fuel)LT3       •       •       •         90 Auxiliary Heater (Fuel)LT3       •       •       •         91 Auxiliary Heater (Fuel)LT3       •       •       •         92 Additional Heater, Water LT3       •       •       •         94 Airbag LT3       •       •       •       •         97 Additional Heater, Water LT3       •       •       •       •         97 Additional Heater, Water LT3       •       •       •       •       •         97 Additional Heater, Water LT3       •       •       •       •       •       •       •       •       •       •       •       •       •       •       <		•	•	•	•
93 Inmobilizer LT3       •       •         94 Airbag LT3       •       •         95 Electronic Stability Program LT3       •       •         96 Instruments Cluster LT3       •       •         97 Tachograph LT3       •       •       •         97 Tachograph LT3       •       •       •         98 Tire Pressure Monitoring LT3       •       •       •         98 Electrical Ignition/Starter Switch LT3       •       •       •         90 Electrical Ignition/Starter Switch LT3       •       •       •         90 Envice''s Door Electronics LT3       •       •       •       •         90 Auxiliary Heater(Fluel)LT3       •       •       •       •       •         91 Additional Heater, Water LT3       •		•	•	•	•
94 Airbag LT3       •       •       •         95 Electronic Stability Program LT3       •       •       •         96 Instruments Cluster LT3       •       •       •         97 Tachograph LT3       •       •       •       •         98 Tire Pressure Monitoring LT3       •       •       •       •         99 Electrical Ignition/Starter Switch LT3       •       •       •       •         90 Driver's Door Electronics LT3       •       •       •       •       •         90 Auxiliary Heater(Fuel)LT3       •		•	•	•	•
95 Electronic Stability Program LT3   96 Instruments Cluster LT3   97 Tachograph LT3   98 Tire Pressure Monitoring LT3   99 Electrical Ignition/Starter Switch LT3   99 Electronics LT3   90 A Remote Control LT3   90 Daviliary Heater(Fuel)LT3   90 Auxiliary Heater(Electric)LT3   97 Additional Heater, Water LT3   90 Axiliary Heater(Electric)LT3   97 Additional Heater, Water LT3   97 Additional Heater, Water LT3   98 Tirephone LT3   99 Charter LT3   90 Availary Heater(Electric)LT3   91 Avaigation LT3   92 Changer LT3   93 Telephone LT3   94 Microphone Control Unit   95 Ford Forsensor Briver Assistance System   96 Microphone Control Unit   97 Additor for Structure-Borne Sound   98 Cauctant Control Module   99 Sensors Brake Systems   90 Roof Display/Control Head (Roof Control Head) LT3   91 Topparating Field LT3   92 Tarler Function LT3   93 Tarler Function LT3   94 Starler Starter System Control Module LT3   95 Programmable Special Module LT3   96 Availary Display Conrol Unit   97 Advector Starter System Control Module LT3   98 Deore Electronic Roef Control 2   99 Assembly Mounting   99 Bearter State System State System Control Module LT3   90 Assembly Mounting   90 Assembly Mounting </td <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		•	•	•	•
96 Instruments Cluster LT3       •       •         97 Tachograph LT3       •       •         98 Tire Pressure Monitoring LT3       •       •         99 Electrical Ignition/Starter Switch LT3       •       •         99 Electrical Ignition/Starter Switch LT3       •       •         98 Remote Control LT3       •       •       •         98 Driver's Door Electronics LT3       •       •       •         90 Auxiliary Heater(Puel)LT3       •       •       •         97 Additional Heater, Water LT3       •       •       •         90 Auxiliary Heater(Electric)LT3       •       •       •         97 Additional Heater, Water LT3       •       •       •         97 Additional Heater, Water LT3       •       •       •         A0 Radio 'Audio 5' LT3       •       •       •       •         A1 Navigation LT3       •       •       •       •       •         A2 CD Changer LT3       • </td <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		•	•	•	•
97 Tachograph LT3       •       •       •         98 Tire Pressure Monitoring LT3       •       •       •         99 Electrical Ignition/Starter Switch LT3       •       •       •         99 Briver's Door Electronics LT3       •       •       •       •         90 Driver's Door Electronics LT3       •       •       •       •       •         90 Auxiliary Heater (Fuel)LT3       •		•	•	•	•
98 Tire Pressure Monitoring LT3       •       •         99 Electrical Ignition/Starter Switch LT3       •       •         98 Remote Control LT3       •       •         98 Driver's Door Electronics LT3       •       •         90 Auxiliary Heater(Fuel)LT3       •       •         91 Auxiliary Heater(Fuel)LT3       •       •         92 Auxiliary Heater(Electric)LT3       •       •         94 Additional Heater, Water LT3       •       •         00 Auxiliary Heater(Electric)LT3       •       •         94 Additional Heater, Water LT3       •       •         00 Auxiliary Heater(Stelectric)LT3       •       •         95 Additional Heater, Water LT3       •       •         00 Auxiliary Heater(Stelectric)LT3       •       •         95 Additional Heater, Water LT3       •       •         01 Auxigation LT3       •       •       •         02 CD Changer LT3       •       •       •         03 Telephone LT3       •       •       •         04 Storophone Control Unit       •       •       •         04 Microphone Control Unit       •       •       •         05 Front Sensors Driver Assistance System       •       •		•	•	•	•
99 Electrical Ignition/Starter Switch LT3   9A Remote Control LT3   9B Driver's Door Electronics LT3   9C A/C Electronics LT3   9D Auxiliary Heater (Fuel)LT3   9E Auxiliary Heater (Electric)LT3   9F Additional Heater, Water LT3   AO Radio 'Audio 5' LT3   AO Radio 'Audio LT3   AO Sensors Driver Assistance System   AO Reductant Control Module   AD Sensors Brake Systems   BO Roof Display/Control Head (Roof Control Head) LT3   B1 Upper Operating Field LT3   B2 Parking Aid LT3   B4 Vehicle Electrical System Control Module LT3   B5 Programmabl		•	•	•	•
9A Remote Control LT3•••9B Driver's Door Electronics LT3•••9C A/C Electronics LT3•••9D Auxiliary Heater(Fuel)LT3•••9F Additional Heater, Water LT3•••0R Radio 'Audio 5' LT3•••Al Navigation LT3•••A2 CD Changer LT3•••A3 Telephone LT3•••A6 Microphone Control Unit•••A7 Infotainment Interface•••A0 Radio for Structure-Borne Sound•••AD Sensors Brake Systems•••AD Sensors Brake Systems•••B1 Upper Operating Field LT3•••B2 Parking Aid LT3•••B4 Vehicle Electrical System Control Module LT3••B5 Programmable Special Module LT3•••B6 Stering Column Jacket Switch Module LT3•••B7 Access Startsystem Interface•••B7 Access Startsystem Interface•••B7 Access Startsystem Interface•••B7 Access Startsystem Interface•••B8 Electronic Roor Control 2•••B8 Deoor Electronics Rear Driver Side•••		•	•	•	•
9B Driver's Door Electronics LT3       •       •         9C A/C Electronics LT3       •       •         9D Auxiliary Heater(Fuel)LT3       •       •         9E Auxiliary Heater(Electric)LT3       •       •         9F Additional Heater, Water LT3       •       •         A0 Radio 'Audio 5' LT3       •       •         A0 Radio 'Audio 5' LT3       •       •         A0 Radio 'Audio 5' LT3       •       •         A1 Navigation LT3       •       •         A2 CD Changer LT3       •       •         A3 Telephone LT3       •       •         A5 Front Sensors Driver Assistance System       •       •         A6 Microphone Control Unit       •       •         A7 Infotainment Interface       •       •         A0 Radiu Control Module       •       •         AD Sensors Brake Systems       •       •         B0 Roof Display/Control Head (Roof Control Head) LT3       •       •         B1 Upper Operating Field LT3       •       •       •         B2 Parking Aid LT3       •       •       •         B4 Vehicle Electrical System Control Module LT3       •       •       •         B5 Programmable Special Module LT3		•	•	•	•
9C A/C Electronics LT3       •       •       •         9D Auxiliary Heater (Fuel) LT3       •       •       •         9E Auxiliary Heater (Electric) LT3       •       •       •         9F Additional Heater, Water LT3       •       •       •         AO Radio 'Audio 5' LT3       •       •       •       •         AO Radio 'Audio 5' LT3       •       •       •       •         AO Radio 'Audio 5' LT3       •       •       •       •         Al Navigation LT3       •       •       •       •       •         A2 CD Changer LT3       •		•	•	•	•
9D Auxiliary Heater (Fuel) LT3       •       •       •         9E Auxiliary Heater (Electric) LT3       •       •       •         9F Additional Heater, Water LT3       •       •       •         AO Radio 'Audio 5' LT3       •       •       •       •         AN avigation LT3       •       •       •       •       •         A1 Navigation LT3       •       •       •       •       •       •         A2 CD Changer LT3       •		•	•	•	•
9E Auxiliary Heater (Electric) LT3       •       •       •         9F Additional Heater, Water LT3       •       •       •         AO Radio 'Audio 5' LT3       •       •       •         A1 Navigation LT3       •       •       •       •         A2 CD Changer LT3       •       •       •       •       •         A3 Telephone LT3       •       •       •       •       •       •         A5 Front Sensors Driver Assistance System       •		•	•	•	•
9F Additional Heater, Water LT3 • • •   A0 Radio 'Audio 5' LT3 • • •   A1 Navigation LT3 • • •   A2 CD Changer LT3 • • •   A3 Telephone LT3 • • •   A5 Front Sensors Driver Assistance System • • •   A6 Microphone Control Unit • • •   A7 Infotainment Interface • • •   A9 Actuator for Structure-Borne Sound • • •   AC Reductant Control Module • • •   AD Sensors Brake Systems • • •   B0 Roof Display/Control Head (Roof Control Head) LT3 • •   B1 Upper Operating Field LT3 • • •   B2 Parking Aid LT3 • • •   B3 Trailer Function LT3 • • •   B4 Vehicle Electrical System Control Module LT3 • •   B5 Programmable Special Module LT3 • • •   B6 Steering Column Jacket Switch Module LT3 • • •   B7 Access Startsystem Interface • • •   B8 Electronic Roof Control 2 • • •   B9 Auxiliary Display Conrol Unit • • •   B8 Door Electronics Rear Driver Side • • •		•	•	•	•
A0 Radio ' Audio 5' LT3       •       •       •       •         A1 Navigation LT3       •       •       •       •         A2 CD Changer LT3       •       •       •       •         A3 Telephone LT3       •       •       •       •         A5 Front Sensors Driver Assistance System       •       •       •       •         A6 Microphone Control Unit       •       •       •       •       •         A7 Infotainment Interface       •		•	•	•	•
A2 CD Changer LT3••••A3 Telephone LT3••••A5 Front Sensors Driver Assistance System••••A6 Microphone Control Unit•••••A7 Infotainment Interface•••••A9 Actuator for Structure-Borne Sound•••••AC Reductant Control Module•••••AD Sensors Brake Systems•••••B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3•••••B4 Vehicle Electrical System Control Module LT3•••••B5 Programmable Special Module LT3••••••B7 Access Startsystem Interface••• <td>AO Radio 'Audio 5' LT3</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	AO Radio 'Audio 5' LT3	•	•	•	•
A3 Telephone LT3••••A5 Front Sensors Driver Assistance System••••A6 Microphone Control Unit••••A7 Infotainment Interface••••A9 Actuator for Structure-Borne Sound••••AC Reductant Control Module••••AD Sensors Brake Systems••••B0 Roof Display/Control Head (Roof Control Head) LT3•••B1 Upper Operating Field LT3••••B2 Parking Aid LT3••••B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••B8 Door Electronics Rear Driver Side••••	A1 Navigation LT3	•	•	•	•
A3 Telephone LT3••••A5 Front Sensors Driver Assistance System••••A6 Microphone Control Unit••••A7 Infotainment Interface••••A9 Actuator for Structure-Borne Sound••••AC Reductant Control Module••••AD Sensors Brake Systems••••B0 Roof Display/Control Head (Roof Control Head) LT3•••B1 Upper Operating Field LT3••••B2 Parking Aid LT3••••B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••B8 Door Electronics Rear Driver Side••••		•	•	•	•
A6 Microphone Control Unit•••••A7 Infotainment Interface•••••A9 Actuator for Structure-Borne Sound•••••AC Reductant Control Module•••••AD Sensors Brake Systems•••••B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3•••••B3 Trailer Function LT3•••••B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••B8 Door Electronics Rear Driver Side••••B8 Door Electronics Rear Driver Side••••	A3 Telephone LT3	•	•	•	•
A6 Microphone Control Unit•••••A7 Infotainment Interface•••••A9 Actuator for Structure-Borne Sound•••••AC Reductant Control Module•••••AD Sensors Brake Systems•••••B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3•••••B3 Trailer Function LT3•••••B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••B8 Door Electronics Rear Driver Side••••B8 Door Electronics Rear Driver Side••••	A5 Front Sensors Driver Assistance System	•	•	•	•
A9 Actuator for Structure-Borne Sound••••AC Reductant Control Module•••••AD Sensors Brake Systems•••••B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3•••••B3 Trailer Function LT3•••••B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••B8 Door Electronics Rear Driver Side••••••••••••••••	A6 Microphone Control Unit	•	•	•	•
AC Reductant Control Module••••AD Sensors Brake Systems••••B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3••••••B3 Trailer Function LT3••••••B4 Vehicle Electrical System Control Module LT3•••••B5 Programmable Special Module LT3•••••B6 Steering Column Jacket Switch Module LT3•••••B7 Access Startsystem Interface•••••B8 Electronic Roof Control 2•••••B9 Auxiliary Display Conrol Unit•••••BA Assembly Mounting•••••BB Door Electronics Rear Driver Side•••••	A7 Infotainment Interface	•	•	•	•
AD Sensors Brake Systems•••B0 Roof Display/Control Head (Roof Control Head) LT3•••B1 Upper Operating Field LT3•••B2 Parking Aid LT3•••B3 Trailer Function LT3•••B4 Vehicle Electrical System Control Module LT3•••B5 Programmable Special Module LT3•••B6 Steering Column Jacket Switch Module LT3•••B7 Access Startsystem Interface•••B8 Electronic Roof Control 2•••B9 Auxiliary Display Conrol Unit•••BA Assembly Mounting•••B8 Door Electronics Rear Driver Side•••	A9 Actuator for Structure-Borne Sound	•	•	•	•
B0 Roof Display/Control Head (Roof Control Head) LT3••••B1 Upper Operating Field LT3•••••B2 Parking Aid LT3••••••B3 Trailer Function LT3••••••B4 Vehicle Electrical System Control Module LT3••••••B5 Programmable Special Module LT3••••••B6 Steering Column Jacket Switch Module LT3•••••B7 Access Startsystem Interface•••••B8 Electronic Roof Control 2•••••B9 Auxiliary Display Conrol Unit••••••BA Assembly Mounting•••••••BB Door Electronics Rear Driver Side••••••	AC Reductant Control Module	•	•	•	•
B1 Upper Operating Field LT3••••B2 Parking Aid LT3•••••B3 Trailer Function LT3•••••B4 Vehicle Electrical System Control Module LT3•••••B5 Programmable Special Module LT3•••••B6 Steering Column Jacket Switch Module LT3•••••B7 Access Startsystem Interface•••••B8 Electronic Roof Control 2•••••B9 Auxiliary Display Conrol Unit•••••BA Assembly Mounting•••••BB Door Electronics Rear Driver Side•••••	AD Sensors Brake Systems	•	•	•	•
B2 Parking Aid LT3Image: Constraint of the system of the system control module LT3Image: Constraint of the system control module LT3B4 Vehicle Electrical System Control Module LT3Image: Constraint of the system control module LT3Image: Constraint of the system control module LT3B5 Programmable Special Module LT3Image: Constraint of the system cons	BO Roof Display/Control Head (Roof Control Head) LT3	•	•	•	•
B3 Trailer Function LT3Image: Control Module LT3Image: Control Module LT3B4 Vehicle Electrical System Control Module LT3Image: Control Module LT3Image: Control Module LT3B5 Programmable Special Module LT3Image: Control Module LT3Image: Control Module LT3B6 Steering Column Jacket Switch Module LT3Image: Control Module LT3Image: Control Module LT3B7 Access Startsystem InterfaceImage: Control Module LT3Image: Control Module LT3B8 Electronic Roof Control 2Image: Control Module LT3Image: Control Module LT3B9 Auxiliary Display Conrol UnitImage: Control Module LT3Image: Control Module LT3BA Assembly MountingImage: Control Module LT3Image: Control Module LT3BB Door Electronics Rear Driver SideImage: Control Module LT3Image: Control LT3B1 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B2 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B2 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B3 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B3 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B3 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B4 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B4 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3B4 Door Electronics Rear Driver SideImage: Control LT3Image: Control LT3<	B1 Upper Operating Field LT3	•	•	•	•
B4 Vehicle Electrical System Control Module LT3••••B5 Programmable Special Module LT3•••••B6 Steering Column Jacket Switch Module LT3•••••B7 Access Startsystem Interface•••••B8 Electronic Roof Control 2•••••B9 Auxiliary Display Conrol Unit•••••BA Assembly Mounting•••••BB Door Electronics Rear Driver Side•••••	B2 Parking Aid LT3	•	•	•	•
B5 Programmable Special Module LT3••••B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••BA Assembly Mounting••••BB Door Electronics Rear Driver Side••••	B3 Trailer Function LT3	•	•	•	•
B6 Steering Column Jacket Switch Module LT3••••B7 Access Startsystem Interface••••B8 Electronic Roof Control 2••••B9 Auxiliary Display Conrol Unit••••BA Assembly Mounting••••BB Door Electronics Rear Driver Side••••	B4 Vehicle Electrical System Control Module LT3	•	•	•	•
B7 Access Startsystem InterfaceImage: Constraint of the system of the syste	B5 Programmable Special Module LT3	•	•	•	•
B8 Electronic Roof Control 2Image: Control 2Image: Control 2B9 Auxiliary Display Conrol UnitImage: Control 2Image: Control 2BA Assembly MountingImage: Control 2Image: Control 2BB Door Electronics Rear Driver SideImage: Control 2Image: Control 2B0 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B1 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B2 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B3 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B3 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B3 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B4 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B5 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B5 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B5 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B6 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B6 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B7 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B7 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B8 Door Electronics Rear Driver SideImage: Control 2Image: Control 2B8 Door Electronics Rear Driver SideImage: Control 2Image: Contr	B6 Steering Column Jacket Switch Module LT3	•	•	•	•
B9 Auxiliary Display Conrol UnitImage: Conrol UnitImage: Conrol UnitBA Assembly MountingImage: Conrol UnitImage: Conrol UnitBB Door Electronics Rear Driver SideImage: Conrol UnitImage: Conrol UnitImage: Conrol UnitImage: Conrol UnitImage: Conrol UnitBB Door Electronics Rear Driver SideImage: Conrol UnitImage: Conrol Unit	B7 Access Startsystem Interface	•	•	•	•
BA Assembly Mounting•••BB Door Electronics Rear Driver Side•••	B8 Electronic Roof Control 2	•	•	•	•
BB Door Electronics Rear Driver Side • • • •	B9 Auxiliary Display Conrol Unit	•	•	•	•
	BA Assembly Mounting	•	•	•	•
BC Door Electronics Rear Passenger Side • • •	BB Door Electronics Rear Driver Side	•	•	•	•
	BC Door Electronics Rear Passenger Side	•	•	•	•
BD High Voltage Battery Charge Management $ullet$ $ullet$ $ullet$	BD High Voltage Battery Charge Management	•	•	•	•

BE Sliding Door Rear Left				•		
BF Sliding Door Right				•	•	$\bullet$
CO Actuator For Exterior Noise			●	•	•	$\bullet$
C1 Battery regulation LT3			●	•	•	•
C2 Transmission Control Module 2			●	•	•	•
C4 DC/DC Converter Control Module			●	•	•	•
C5 Thermal Management			●	•	•	$\bullet$
C6 Battery Charger Control Module			●	•	•	•
C7 Pedestrian Protection			●	•	•	•
CB Rear Axle Steering			●	•	•	•
DO Front Axle Lift System			●	•	•	•
<pre>VW_V01.10 Reset Function List (Note:For reference only)</pre>						
Vehicle	OIL	EPB	ETC	BMS	SAS	DPF
VW	*	*	*	*	*	*