

Special Function			
index	Special Function Name	index	Special Function Name
0005	Programmable Module Installation	0098	Reset the Diesel Particulate Filter Learned Values
0006	Module Reprogramming	0099	Reset the Exhaust Gas Recirculation Valve Learned Values
0007	Programmable Parameters	009A	Reset the Intake Air Throttle Valve Learned Values
0008	ABS Service Bleed	009B	Reset / Clear Specified Function
0009	PATS Functions	009C	SCR Dosing Measurement Test
000A	Remote Keyless Entry	009D	SCR Parameter Reset
000B	G Sensor Calibration	009E	SCR System Emptying
000C	Passenger System Reset	009F	SCR System Refill Activation
000D	Neutral Position Setting	00A0	SCR Visual Leak Check
000E	Ride Height Calibration	00A1	System Prime
000F	Factory Keyless Entry Code	00A2	WIF Reset
0010	Stop Use of Transmission Adaptive	00A3	DPF Reset
0011	Power Seat Calibration	00A4	Enter the Fuel Injector Default Count Value
0012	IVD Initialization Sequence	00A5	Clutch Switch Learn
0013	Pneumatic Test	00A6	Engine Oil Quality History
0014	Accurate Trim Test	00A7	Fuel Injection Pump Learn
0015	Passenger Zero Seat Weight Test	00A8	Fuel Injector Pilot Correction Learn
0016	Microphone Test	00A9	Fuel System Leak Test
0017	Audio Speaker Walkaround Test	00AA	Initialize the Exhaust Gas Related Component.
0018	Infotainment Display Test	00AB	Reset Differential Pressure Sensor Learned Values
0019	Tones Test	00AC	Reset KAM
001A	TPMS Functions	00AD	Reset MAF Sensor Drift.
001B	Zero Speed Test	00AE	Reset MAF Sensor Offset.
001C	Rear Tones Test	00AF	Reset the air conditioning compressor learned values.
001D	Monotones Test	00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
001E	Sensor Initialization	00B1	Reset the Exhaust Gas Temperature Value
001F	EPB calibration.	00B2	Reset the Fuel Injection Pump Learned Values
0020	EATC Operation Check	00B3	Reset the Fuel Injector Learned Values
0021	Rain Sensor Reset	00B4	Reset the Fuel Metering Valve Learned Values
0022	LPSDM and RPSDM Service Function	00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value
0023	Power Balance	00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value
0024	EVAP Test	00B7	Reset the Fuel Rail Pressure Sensor Learned Values
0025	Reset PCM KAM	00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
0026	OBDII Modes	00B9	Reset the Mass Air Flow Sensor Learned Values
0027	Clear Transmission Adaptive Learning	00BA	Reset the Neutral Gear Position Learned Value
0028	Clear Transmission Adaptive Tables	00BB	Reset the oil change indicator.
0029	Configure All Three Sensors Together.	00BC	Reset the Powertrain Control Module Learned Values
002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.	00BD	Reset the Turbocharger Learned Values.
002B	Configure the lateral acceleration sensor.	00BE	Reset the Turbocharger Variable Vane Actuator Learned Values
002C	Configure the pressure sensor.	00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values
002D	FFH SelfTest and Prefill Utility	00C0	Reset the Vehicle Speed Limit
002E	FFH Start Heater Utility	00C1	Reset the water in fuel Warning Indicator.
002F	FFH Unlock Utility	00C2	rpm Controller
0030	Auxiliary vehicle ID reset	00C3	Stop-Start Activation
0031	Halt Transmission Adaptive Learning	00C4	Speed Limiting
0032	Headlamp Alignment	00C5	TR Sensor Test
0033	Resume Transmission Adaptive Learning	00C6	Transmission Fluid Level Test
0034	Resume Transmission Adaptive Tables	00C7	Automatic Transmission PRNDL Display Test
0035	Keyfob Training	00C8	BSI Solenoid Test
0036	Transmission	00C9	Automatic Transmission Park Switch Test
0037	Transmission Learning	00CA	ABS reset and configuration.
0038	Transmission Solenoid Body IDN	00CB	PDC Reset
0039	VSM Service Functions	00CC	Steering Wheel Position Sensor Calibration
003A	A/C Test	00CD	Preliminary Checks
003B	ACM	00CE	Reset TCM KAM
003C	ACM Security Bypass Test	00CF	Fuel System Prime
003D	Air/Fuel Learning	00D0	Remote Start
003E	AM Antenna Reception Sensitivity Test	00D1	TBM SIM RAV_ID
003F	ASM Service Functions	00D2	Reset TBM Password
0040	audio configuration	00D3	TBM Transit Mode
0041	Auto Leveling Sensor Re-zero Procedure	00D4	CEI Lock Configuration
0042	Tire pressure monitoring system	00D5	BMS Reset
0043	BSM Radar Test	00D6	Navigation
0044	Button Test	00D7	Calibrate Steering Angle Sensor
0045	CAN Bus Fault Test	00D8	Configure the steering column assembly
0046	CCM Calibration	00D9	Configure the longitudinal acceleration sensor
0047	Clear EGR Adaptive Tables	00DA	Configure the intermediate shaft
0048	Clear Fuel Injector & HP Pump Adaptive Tables	00DB	Module Initialization
0050	Clearing of Learning Value	00DC	Pull Drift Compensation
0051	Component/Parameter Reset	00DD	Calibrate Longitudinal Acceleration Sensor
0053	Configure the steering angle sensor.	00DE	Inhibit longitudinal accelerometer monitoring
0054	Configure the yaw rate sensor.	00DF	Pull Drift Compensation enable/disable
0055	Data Reset	00E0	Straight Ahead Adaption Angle Reset
0056	DPF	00E1	Steering Rack Limiter Configuration
0057	DPF Component Parameter	00E2	Pressure Sensor Calibration
0058	DPF Manual Regeneration	00E3	Reset Pressure Sensor Offset
0059	DPF Parameter Reset	00E4	Enable/Disable hill launch assist
005A	Electronic Throttle Control	00E5	Camera Alignment
005B	EPS Steering Angle Calibration	00E6	Shift fork system learn.
005C	ETB/EGR Initialization	00E7	Reset the High Pressure Fuel System Learned Values
005D	FACM	00E8	Bleed Master
005E	FFH Operation Check	00E9	FCDIM_Keycode_reset
005F	Gauge Test	00EA	EPB
0060	ICCM Aiming Adjustment	0101	Audio
0061	Illumination Test	0102	Battery saver
0062	Input and Data Test	0103	Body Type
0063	Interior Scan Test	0104	Courtesy Lamp
0064	Keyless Entry Keypad Code Reset	0105	Door Trigger Disable Mode
0065	Learning	0106	Body and Fuel Type
0066	Misfire Check	0107	Hazard Warning
0067	Misfire Monitor Neutral Profile Correction	0108	Horn Warning
0068	Module Identification	0109	Master Door Trigger Disable Mode
0069	Multifunction Output Test	010A	Panic Alarm
006A	Network Test	010B	Police Mode
006B	New FACM	010C	Traction control system
006C	Parking Aid Switch Test	010D	Autolamp Off Setting
006D	Passenger Seat Weight Sensor ReZero	010E	Autolamp On Setting
006E	Rebalance	010F	Police Speedometer Offset
006F	Reset the Knock Sensor Learned Values	0110	Cabin Temperature Sensor Calibration Factor
0070	Reset Transmission Tables	0111	Taxi Mode
0071	Resetting adaptive values	0112	Low Coolant Warning
0072	RVM Aiming	0113	Parking Brake Warning
0074	Service Routine	0114	Headlamp Delay Door Open
0075	Special Ignition ON	0115	Headlamp Delay Ignition Off
0076	Steering angle sensor calibration	0116	Headlamp Delay Remote Lock Pressed
0077	Supplemental Heater Test	0117	Dynamic Stability Control
0080	Mode 1 Powertrain Data	0118	Hill Descent Control LED
0081	Mode 6 On-Board Test Results	0119	Brake System Configuration
0082	Mode 8 - On-Board device control	011A	BPM fitted
0083	Mode 9 - Vehicle Information	011B	Camera fitted
0084	OBD Drive Cycle	011C	Audio Interface Module
0085	Service Functions	011D	Sonar fitted
0090	Diesel Particulate Filter Static Regeneration	011E	Navigation System
0091	DPF Regeneration Suspension	011F	Parking Aid Module
0092	Fuel Injector Correction Factors	0120	Odometer Write
0093	IQA	0121	Subwoofer
0094	Refill the FAT.	0122	Driver Beltminder Status
0095	Relearn Vehicle Data	0123	Alarm
0096	Reset Charge Air Cooler Bypass Valve Position Offset.	0124	Audio Configure
0097	Reset the Cooling Fan Motor Learned Values		